
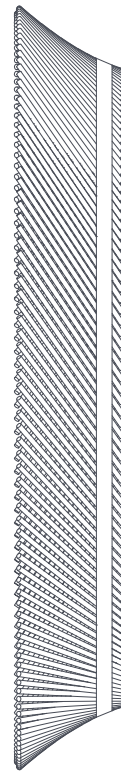


MOODA MIRROR

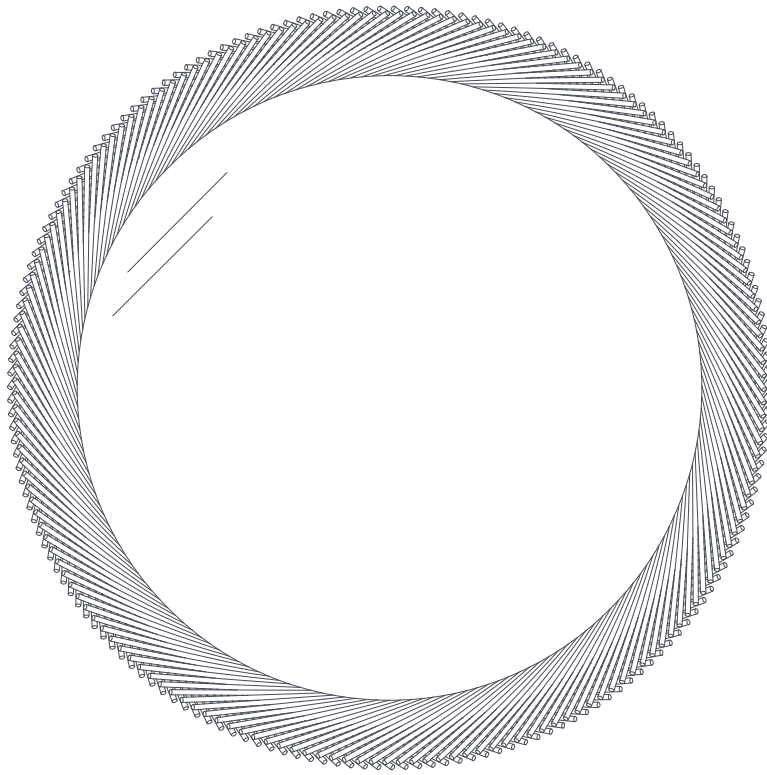

DO NOT HOLD MIRROR BY THE DECORATIVE EDGE. IT IS NOT LOAD BEARING.

CAREFULLY LIFT THE MIRROR FROM THE BASE.

DO NOT ATTEMPT TO INSTALL MIRROR BY YOURSELF. YOU MUST HAVE A SECOND PERSON AID IN INSTALLATION.

Items needed:

- Level
- Measuring tape
- #8 or #10 drywall/lathe screws
- Wall anchors (if needed)
- Screwdriver or drill


Package Includes:

- Moods Mirror
- 2X Adhesive backed wall cleats
- Marking Template

INDO-


Determine the mirror's desired location and mounting height. Locate studs in the wall using a stud finder (if applicable). For secure wall mounting, use appropriate expansion wall anchors or screw directly into a wall stud (the cleats are spaced 16" on center for easy stud mounting).

(A) Using a level, draw a horizontal line 8" below the desired top of the mirror. Bring the template up and align top edge with line.

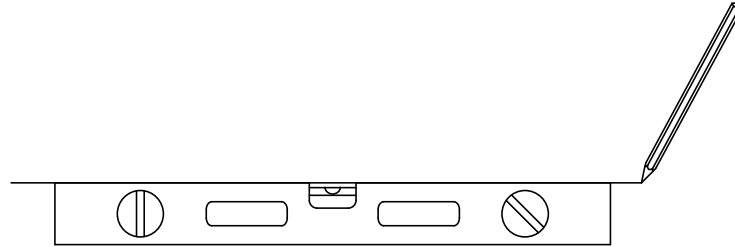


(A)

(B) If drilling into studs, mark centerpoint and align marked centers of line and template to ensure you drill into stud.

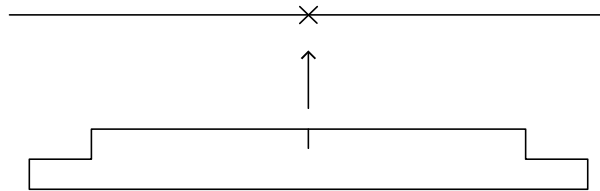


(B)

(C) Mark positions of cleats OR while template is against wall, peel the adhesive backing and stick the cleats onto the wall in the orientation shown. Secure the cleats to the wall using screws and a screwdriver or drill until snug. DO NOT OVERTIGHTEN.

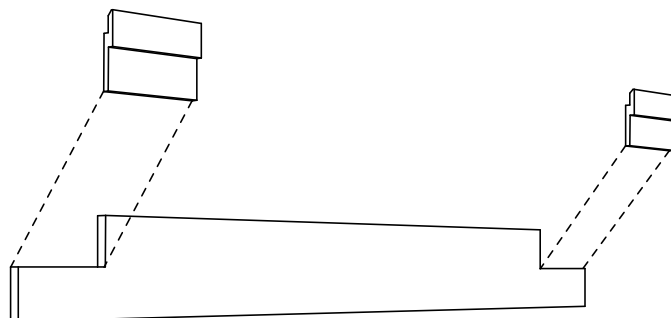

(C)

(D) Hold the mirror against the wall above the installed cleats and slide down to allow the cleats to overlap.

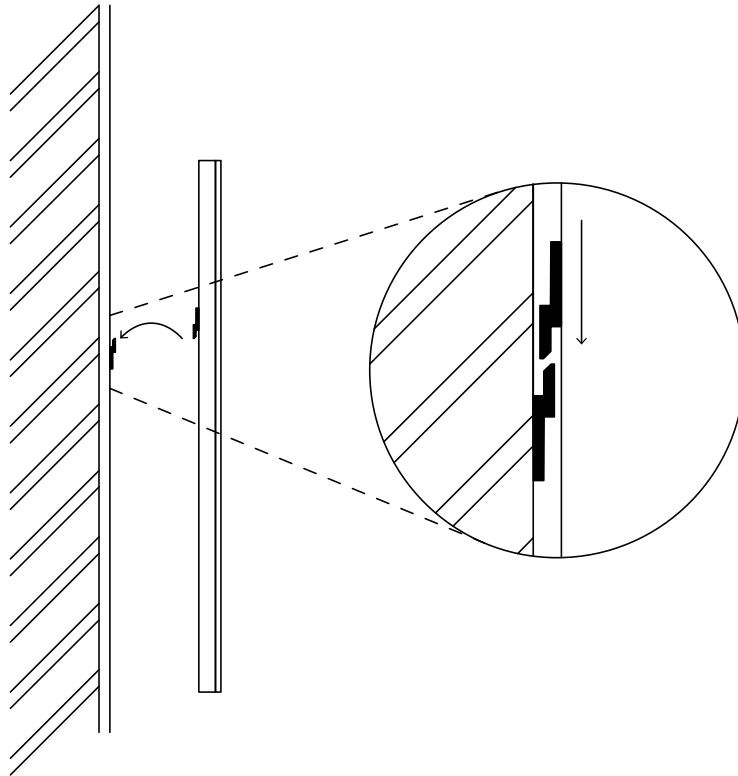

(D)

CARE AND MAINTENANCE

Do not use alcohol based cleaning products for the mirror. Never spray cleaner directly on the mirror surface. Always apply cleaner to a soft, lint-free cloth and wipe the mirror.

Dry the mirror immediately with a dry lint-free cloth.

Clean the frame regularly with a dry lint-free cloth.

INDO-

INSTALLATION INSTRUCTIONS

MOODA MIRROR

© INDO LLC

Mon-Fri: 10:00 AM - 6:00 PM
+1 401-441-7530
110 King Philip Rd, Unit 2G
Rumford, RI 02916

MADE IN USA

info@indo-made.com
www.indo-made.com

INDO-