

# MOODA PENDANT

We recommend installation of our MOODA Pendant by a professional electrician.

This fixture should only be connected to a grounded electrical box supplied by a 120-250 V branch circuit with a 20 Amp max. circuit breaker or fuse. Turn the breaker to the off position or remove the fuse before installation.

**Turn off electrical power before beginning installation and use caution while installing.**

This fixture is handmade. All parts are made custom.

To order replacement parts, please contact us at [info@indo-made.com](mailto:info@indo-made.com)

This light fixture can be installed with either incandescent or LED light bulbs.

For a list of recommended/compatible dimmers, please refer to the bulb manufacturer's website.

## CAUTION:

Failure to follow directions can damage the light and cause bodily harm.

Please wear safety gloves before handling brass parts.

Failure to do so can cause uneven ageing.

Leave the shade packaged when installing the canopy.

Do not apply excessive pressure while installing the shade or overtighten the rings and bulb.

Do not clean lights with alcohol based cleaning products.

Only wipe with a clean, dry cloth.

## **DANGER: Electric Shock Risk!**

Ensure power is disconnected before beginning and use caution while installing.

Failure to do so can result in serious injury or death.


# MOODA PENDANT

Your MOODA Pendant consists of (6) individual parts:

1. Bulb (B)
2. Secondary Ring (S)
3. Primary Ring (P)
4. Woven Shade (M)
5. Canopy Backplate (C1)
6. Canopy Assembly (C2)

For installation, you will need:

1. Safety gloves
2. Philips head screw driver
3. Wire nuts (a)
4. J-Box mounting screws (b)

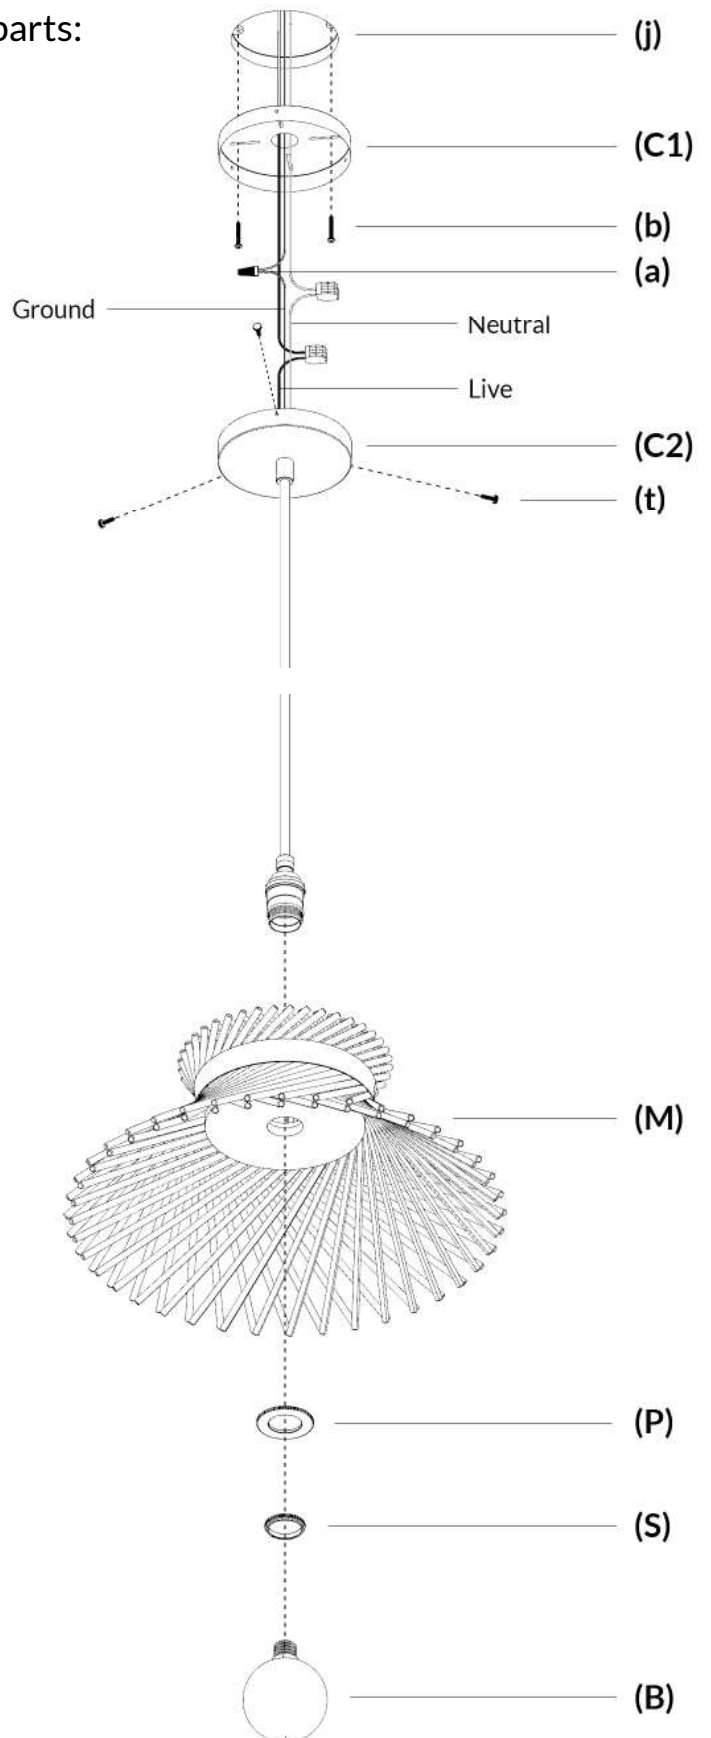

# MOODA PENDANT

1. Please wear safety gloves before handling brass parts. **Power must be disconnected when hardwiring this fixture!**
2. Mount the Canopy Backplate (**C1**) to Junction Box (**j**) with mounting screws (**b**) (not included) such that it is flush with the ceiling.
3. Connect ground wire from the Junction Box (**j**) to the green/copper wire on the Canopy Assembly (**C**) using a wire nut (**a**) (not included).
4. Then connect the live/hot and neutral wires from the Junction Box (**j**) to the corresponding black and white electrical leads on the Canopy Assembly (**C**) using the attached splicing connectors (**c**). Tuck leads, connectors and any excess electrical cord into Junction Box (**j**).
5. Now attach the Canopy Assembly (**C2**) to the backplate with thumb screws (**t**).
6. Unpack the Woven Shade (**M**) and slip it through the bulb holder suspending from the Canopy Assembly (**C**). While holding the shade with one hand or with help from a spotter, thread the Primary Ring (**P**) onto the bulb holder threads, leaving enough threading exposed for the Secondary Ring (**S**).
7. Thread the Secondary Ring (**S**) onto the bulb holder threads. Tighten till the Secondary Ring (**S**) jams against the Primary Ring (**P**) to form a friction lock or jam nut.
8. Carefully lower the Woven Shade (**M**) till it suspends freely from the Canopy Assembly (**C**). Double check that two rings (**S**) and (**P**) have formed a friction lock.  
**\*\* Failure to follow this step can cause accidental dismounting which can damage the light and cause bodily harm! \*\***
9. Finally, thread the Bulb (**B**) into the holder.

# INSTALLATION INSTRUCTIONS

## MOODA PENDANT

© INDO LLC

Mon-Fri: 10:00 AM - 6:00 PM  
+1 401-441-7530  
110 King Philip Rd, Unit 2G  
Rumford, RI 02916

MADE IN USA

[info@indo-made.com](mailto:info@indo-made.com)  
[www.indo-made.com](http://www.indo-made.com)

INDO-